

Quick Start Guide Docking Station II for SGT

Power On & Off

- To turn on, press and hold the Calibration or Bump Test button for 2 seconds
- Automatic power save mode after 5 minutes of inactivity
- To turn off, press and hold the Calibration and Bump Test button for 2 seconds

Bump Test

- Insert the monitor(s) into the bay facing down
- Press the bump test button for 2 seconds to execute Bump Test
- Up to 1,000 bump tests on a single charge


Calibration

- Insert the monitor(s) into the bay facing down
- Press the calibration button for 2 seconds to execute Calibration test

Test Results


- All (six) blue Bay LEDs illumination indicates if the SGT has passed the test
- The third blue Bay LED illumination indicates if the SGT has failed the test

LED's	
Bay LED	● ○ ○ ○ ○ ○ Stand by
	● ● ○ ○ ○ ○ Injecting fresh air
	● ● ● ○ ○ ○ Test
	● ● ● ● ○ ○ Purging remaining gas
	● ● ● ● ● ○ Save a log data
	● ● ● ● ● ● Test pass
	○ ○ ● ○ ○ ○ Test fail
Power LED	● Green: Power on
	● Red: Low Battery
	● Orange: USB not attached or full storage

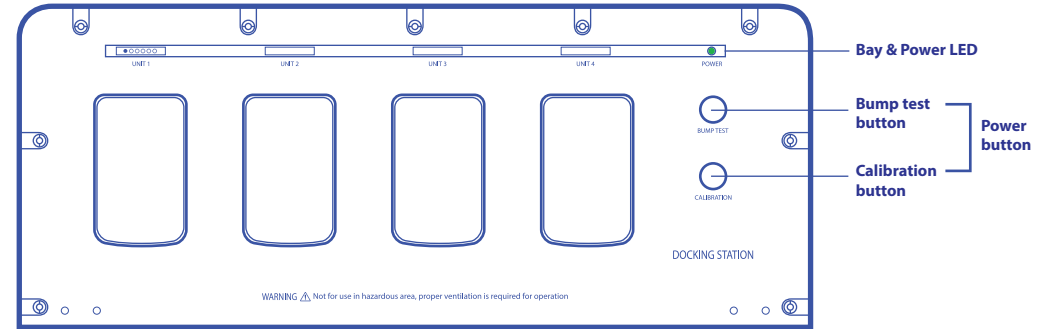

Set up Calibration Gas Cylinder

- Remove thumbscrews and lift the handle
- Install the cylinder to the gas regulator
- Fasten the cylinder straps and close the cylinder compartment
- Check the pressure gauge on the front panel
- Re-install thumbscrews

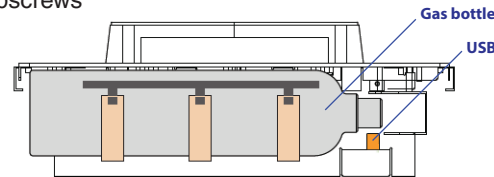

Trouble Shooting

- Bay Light does not turn on /test not performed
 - Clean Monitor IR window
 - IR interference (bright lights/sunlight)
 - Monitor in gas alarm state
- All tests fail
 - Gas cylinder empty
 - Gas Expired
 - Wrong gas concentration(s)
- Test results are not stored
 - USB not attached or full storage
- If you're unable to resolve technical issues, please contact the product's authorized reseller or SENKO service center.

⚠ Important Notes

- USB drive must be installed to store the test results
- The latest SGT firmware will be updated automatically
- For bump testing, ensure the cylinder gas concentration is above the "Low Alarm" setting of the SGT
- For calibration, ensure the SGT "Cal Concentration" setting is the same as the cylinder gas concentration
- Any monitor that fails the bump test or calibration must be re-calibrated and perform the bump test and calibration again. If the attempt fails continuously, please do not use the detector and contact the product's reseller or SENKO service center.
- When connecting SENKO IR Link, make sure "Write" button has clicked to save customized settings.

For more information

SENKO Canada
 548 Lake Bonavista Drive, Calgary,
 Alberta T2J 0M3, Canada
 Email: ben@senkocanada.com, sales@senkocanada.com
 Web: www.senkocanada.com
 Tel: 587-322-1616